10.1 Zoll DVD Player

Haftungsausschluss

- Nachdruck von Teilen oder ganzen Inhalten ist untersagt.
- Wir behalten uns das Recht der Änderung in der Anleitung erwähnten Hardware-und Software-Spezifikation, jederzeit ohne vorherige Ankündigung.
- Abbildungen können abweichen.
- Bitte beachten, wir übernehmen keine Haftung für Folgeschäden nach der Installation

Bedienungsanleitung
Deutsch

V1. 0

Achtung

1 . Bitte verwenden Sie das Gerät nicht im Regen und setzen Sie dem Gerät Keiner großen Luftfeuchtigkeit aus.

2 . Bitte versuchen Sie das Gerät bei einem Defekt nicht selbst zu Reparieren. Bei Fehlfunktionen schalten Sie das Gerät bitte ab und kontaktieren Sie uns, ein Techniker wird sich das Gerät anschauen und eine Reparatur durchführen.

3 . Bitte halten Sie das Gerät von großer Feuchtigkeit, Wasser, Öl und direkter Sonneneinstrahlung fern.

4 . Zum Reinigen des Gerätes bitte keine Verdünnungsmittel oder aggressive Reiniger nutzen. Bitte nutzen Sie zum Reinigen ein weiches Tuch und einen Spezialreiniger.

5 . Bitte betreiben Sie das Gerät nur in einem trockenen Umfeld. Die umgehbungstemperatur sollte -20 ℃ nicht unterschreiten und 70 ℃ nicht überschreiten. Die Betriebstemperatur liegt zwischen -10°C und 60°C.

6 . Ohne CD/DVD/USB/SD kann kein Film abgespielt werden dieses Gerät unterstützt DivX / MPEG4 / DVD / DVD + R / SVCD / VCD / DVCD / CD / MP3 / WMA / CD - R / RW / +R HDCD / JPEG -oder CD - ROM.

7 . Bitte stellen Sie sicher das Andere Geräte keinen Einfluss auf das Gerät haben.

8 . Zu Ihrer Sicherheit sollte das Gerät nicht während der Fahrt vom Fahrer genutzt werden, dies ist in vielen Ländern illegal.

. 9 Betriebsspannung: DC 12V (Spannungsbereich: 10V - 14V)

Achtung

Es können sich kleine helle Stellen auf dem Display befinden, dies ist kein Qualitätsproblem. Hier wird eine Toleranz von 8 Flecken auf dem Display gegeben.

Inhalt

Funktionen…… 1

Layout des Geräts……2

Spiele Gamepad……2

Fernbedienung……3

Inbetriebnahme der Fernbedienung……3

Montage……4

Bedienung des DVD Systems……5

System Einstellungen……5

Bedienung der SD/USB Funktion……7

Menüfunktionen……7

Monitor……9

USB/SD Player……9

Anschluss Diagram……9

Fehleranalyse……10

Achtung……11

Funktionen

- DVD
- Super-Slim Design
- Digital Aufbereitung, scharfe Bilder ohne Interferenzen
- FM Frequenzen: FM87.7MHz/FM87.9MHz/FM88.1MHz/
  FM88.3MHz/FM88.5MHz/FM88.7MHz/FM88.9MHz/FM89.1MHz.
- Dual Infrarot Transmitter
- Audio/Video Ein/Ausgang
- Fernbedienung
- USB/SD/Wireless Audio
- Eingebaute Lautsprecher

Eigenschaften

Displaygröße: **10.1 Zoll**

Auflösung: **1024x600**

Betriebsspannung: **10V-14V)**

Power: **12W**

Fehleranalyse

Fehler	Lösung
Kein Ton und kein Bild	Gerät vom Strom getrennt oder nicht eingeschaltet
Kein Bild	CD/DVD zerkratzt oder verschmutzt. AV Kabel getrennt.
Kein Ton	Lautstärke zu niedrig oder Toneinstellungen falsch.
Schwarzes Bild	Display Helligkeit und Kontrast falsch Eingestellt oder kein Signal.
Bild unscharf	CD/DVD zerkratzt oder verschmutzt.
Farbstich	Schechtes Signal oder Farbeinstellungen falsch
Keine Energieversorgung	Betriebsspannung prüfen / Sicherung überprüfen
Kein Bild nach Einlegen einer CD/DVD	DVD Format nicht unterstützt. DVD stark zerkratzt. DVD stark verschmutzt.
Vibrationsbedingte Tonstörung	DVD ist zerkratzt oder ernsthaft beschädigt.
Tonstörungen	DVD ist zerkratzt oder ernsthaft beschädigt, bitte reinigen oder austauschen.

Monitor

USB/SD Player

Anschluss

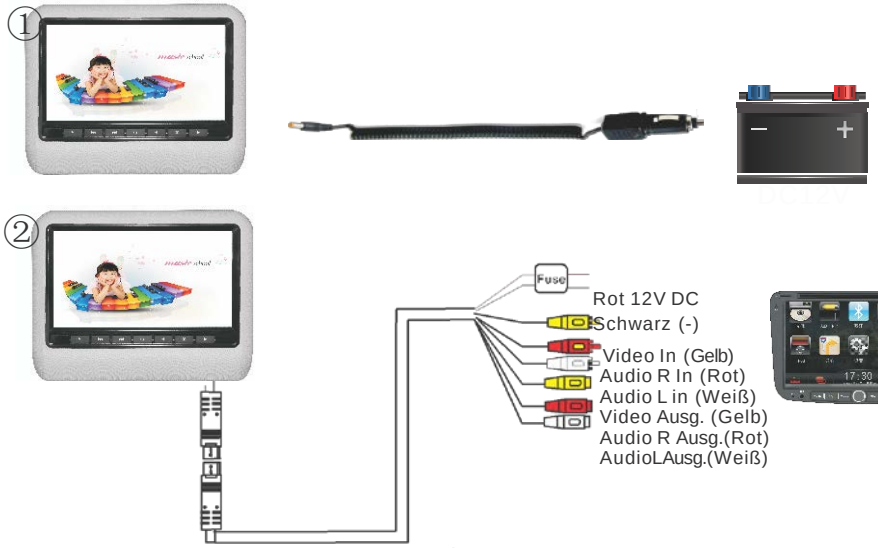

Layout des Geräts

1)Ein/Aus und Modus wechsel
2)Weiter
3)Vor
4)CD/DVD Auswerfen
5)Infrarot Auge
6)Volume -
7)Menü /Start / Stop
8)Volume+
9) Infrarot Auge
10)CD/DVD Einschub
11)USB Anschluss
12)SD Anschluss
13) Kopfhörer Ausgang
14)Video Eingang
15)DC 12V Eingang

GAMEPAD

Fernbedienung

Inbetriebnahme der Fernbedienung

Achtung:

1. Nicht direkt auf das IR Auge fassen

2. Nicht auf die Fernbedienung drücken

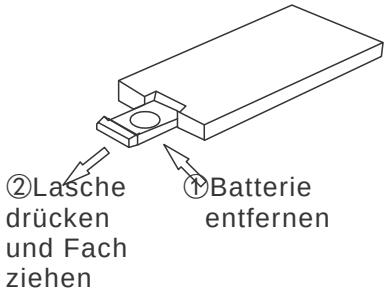

wenn das Batteriefach ausgebaut

ist.

3. Wechseln Sie die Batterie wenn die Funktion der Fernbedienung nachlässt.

4. Normalerweise hält eine Batterie 1 Jahr, wechseln Sie die Batterie

aus wenn die Fernbedienung ohne Funktion ist.

2. Lautstärke Einstellungen

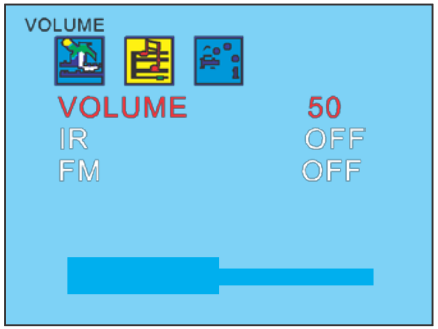

1.Lautstärke

2.IR An/Aus

3.FM An/Aus

3.Funktionensetup

1. Ausrichtung

2.Anzeigemodus

3.Reset

2.Audio

Drück ＜/＞am Gerät oder VOL+ VOL- an der Fernbedieung um

die Lautstärke zu verändern.

A: Lautstärke

Audio Einstellungen, (Sie können zwischen Infratrot/Lautsprecher /Radiolautsprecher, Lautsprecher/Radio, Infrarot/Lautsprecher/Radio, Radio, Infrarot, Infrarot/Lautsprecher, Inrarot wählen)

3. Funktionen

Drücke TFT MENU und diese ↑ ↓ Tasten auf der Fernbedienung um

zwischen den Optionen zu wechseln und die ＜/＞ oder diese ← →

um die Einstellungen zu ändern.

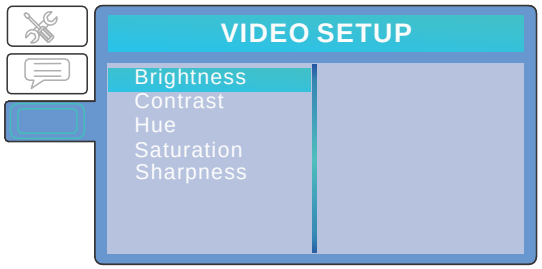

Bedienung der USB/SD Funktion

1.Drücken Sie SD im DVD Modus, dazu muss eine DVD / SD / USB eingesteckt sein.

2.Drücke ■/↻ oder SD im SD/USB Modus und wechseln Sie dann zum DVD Modus.

Menüfunktionen

Im AV1 / AV2 Modus: Drücke am Gerät oder TFT MENU auf der Fernbedienung um in das Menü zu gelangen. ⏮/⏭ Drücken oder ⬆ ⬇ ⬅ ➡ nutzen um Einstellungen zu ändern.

Untermenüs des Hauptmenüs

Bild
Volume
Funktion

Einstellungen

1.Bildeinstellungen

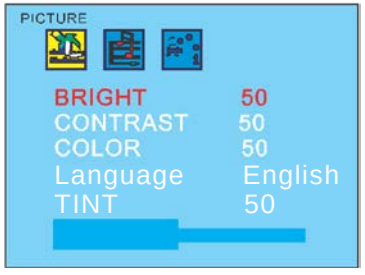

1. Helligkeit
2. Kontrast
3. Farbe
4.Sprache
5.Einfärbung

Installation

1. Entfernen Sie die U Förmigen Bügel und die Schraube an der Halterung. Nehmen Sie die Plastikringe aus den U-Bügeln herraus.

2. Ziehen Sie die Kopfstütze nach oben, finden Sie den passenden Plastikring für Ihre Kopfstützenholme und befestigen Sie diese mit den U-Bügeln an Ihren Kopfstüzenholmen.

3. Nehmen Sie nun die Halterung und fixiren Sie diese zwischen den U-Bügeln, drücken Sie die U-Bügel zusammen und fixieren Sie somit die Halterung, stellen Sie sicher das die Halterung mittig sitzt.

4. Schieben Sie nun die Halterung am Gerät in die Halterung die Sie gerade montiert haben und Befestigen Sie diese mit der Schraube.Überprüfen Sie den Winkel und schieben Sie die Kopfstütze wieder an die gewünschte Position.

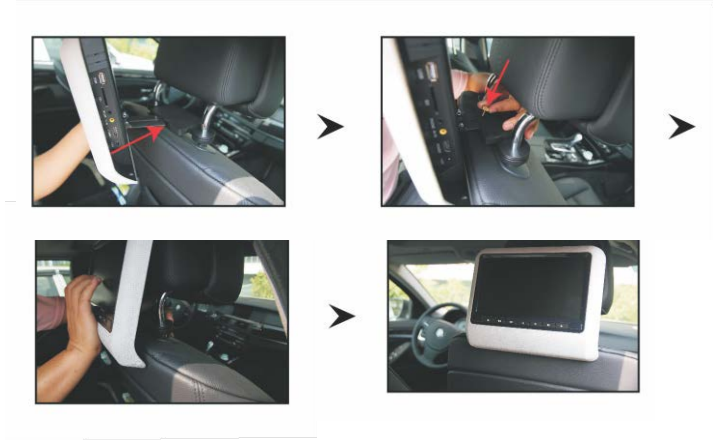

Bedienung des DVD Systems

DVD/DCD/CD abspielen

Bitte die DVD/CD mit dem Label zur Rückseite einlegen, die DVD/CD wird automatisch eingezogen und automatisch wiedergegeben.

Drück ■/⏏ oder ■/⏏ auf der Fernbedienung zum stoppen.

Drück 🕮 oder ⏯ auf der Fernbedienung für Play/Pause.

MP3 abspielen

Eingelegte CD/USB/SD mit Mp3 Dateien werden automatisch abgespielt.

Drück ■/⏏ um die Wiedergabe zu stoppen.

Drück 🕮 oder ⏯ auf der Fernbedienung zum pausieren.

Drück 🕮 oder ⏯ auf der Fernbedienung zum Wiedergeben.

1.Drück AMS RPT um die Repeat (Wiederholen) Funktion zu starten.

2.Nutzen Sie den Ziffernblock um Songs direkt zu wählen.

System Einstellungen

Drücken Sie die Setup Taste um ins Einstellungsmenü zu gelangen.

Nutze ⬆ ⬇ ⬅ ➡ auf der Fernbedienung zum navigieren,

nutzen Sie ENTER zum Bestätigen und auswählen.

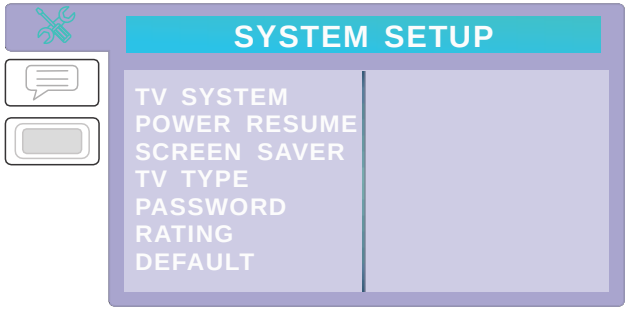

1.TV System: Bestimmen Sie das DVD Bildformat, Sie können wählen aus NTSC/PAL/AUTO.

2.Resume Play: Die wiedergabe wird an der letzten stelle fortgesetzt.

3.Screen Saver: Zeit bis zum automatischen Abschalten.

4.Bildschirm Modus: Wählen Sie die Bildausgabe Art.

5.Password: Setzen Sie ein neues Passwort. Das Standart passwort bei Auslieferung lautet [0000].

6.Altersbeschränkung: Setzen Sie die Kindersicherung in verschiedenen Stufen.

7.Default Setting: Auf Werkseinstellungen zurücksetzen

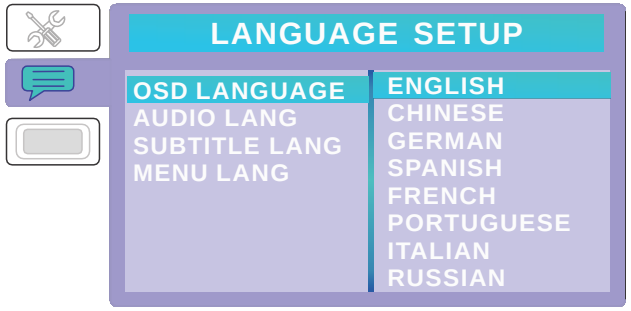

8.Sprache: Wählen Sie die Menüsprache.

9. Audio Sprache: Legen Sie die standart Audio Sprache fest.

10. Untertitel Sprache: Legen Sie die standart Untertitel fest.

11.Menü Sprache: Wählen Sie die standart Menüsprache einer DVD

Hinweis: Die eingelegte DVD muss Menüsprache, Untertitel und Audio Sprachen unterstützen.

12.Video Setup: Legen Sie fest wie die DVD angezeigt werden soll.

10.1 inch DVD Player

Disclaimer

- Unauthorized reprint of partial or full content is prohibited.
- We reserve the right of changing hardware and software specification mentioned in the manual at any time without prior announcement.
- Illustration and legend may differ from practical situation
- Please note we will never be responsible for any consequences due to the use of this product

OPERATING INSTRUCTIONS

V1. 0

Attention

1.Do not put the machine in the rain or damp environment lest outbreak of fire or any damage to machine.

2.Do not repair the machine by yourself. Please turn off the machine and inform us if any problem found, the factory or the agent will arrange specialized personnel to disassemble and repair the machine for you.

3.Please keep the machine away from dampness, dust, oil and straight sunlight.

4.Do not use diluents or other chemical cleaner when cleaning the machine. Please clean the machine by soft cloth with special cleaner.

5.Please keep the machine in a good environment. The storage temperature for this machine is from -20℃ to 70℃ and the operating temperature for this machine is from -10℃ to 60℃.

6.Do not play without the support of disc, this machine supports DIVX / MPEG4 / DVD / DVD + R / SVCD / VCD / DVCD / CD / MP3 / WMA / CD - R/ RW / HDCD + _R / JPEG or CD - ROM7.

7.Please prevent the machine from the influence of other equipment.

8.For your safety, please do not turn on or operate this machine when driving as it may be illegal in some countries and regions.

9.Safe power supply: DC12V(voltage range:10V-14V).

Attention

There may be some small and bright spots on the screen. This is a common technical matter and does not indicate any quality problem of this machine.

operating menu

Contents

Features and Functions..... 1

Appearance and functions.....2

GAMEPAD.....2

Remote control panel.....3

Battery installation diagram for remote control 3

Installation..... 4

Operation of DVD system.....5

System setup..... 5

Introduction of USB/SD function..... .. 7

Menu function setup.....7

AV Display.....9

MP5 Player 9

Wiring diagram.....9

Troubleshooting..... 10

Attention..... 11

Features and Functions

- DVD
- Super-slim design
- Digital technique, sharp image and no interference
- FM Frequency scale: FM87.7MHz/FM87.9MHz/FM88.1MHz/ FM88.3MHz/FM88.5MHz/FM88.7MHz/FM88.9MHz/FM89.1MHz.
- Dual IR Transmitter
- Audio/video input and output
- Full function remote control
- USB/SD/Wireless games
- Built-in speakers

Specifications

Size of screen: 10.1 inch

Pixel: 1024×3（RGB）×600

Rated voltage: DC12V(voltage range:10V-14V)

Power: about 12W

Troubleshooting

Troubles	Solutions
No sound and image	power is disconnected; the machine is not turned on
No image	disc is scratched; signal wire is disconnected
No sound	volume too low or the volume setup is not workable
Black screen	incorrect setup of image luminance and contrast; Undervoltage
Blurring and unstable image	disc is scratched
Color cast	function menu setup is incorrect; weak signal
No power	voltage is not accurate: check interconnect circuit; Fuse is disconnected: change fuse specification
No image after loading the disc	only audio frequency for the disc; disc is scratched; disc format is not supported
Instable sound caused by vibration	DVD is dirty or seriously damaged
Instable sound even with no vibration	disc is dirty or scratched; clean or replace the disc

AV Display

MP5 Player

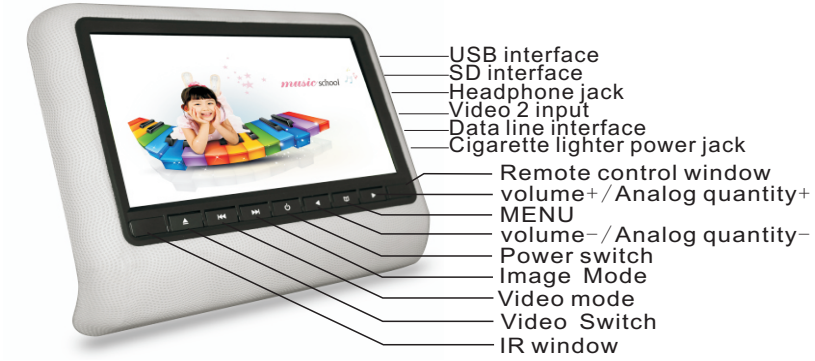

wiring diagram

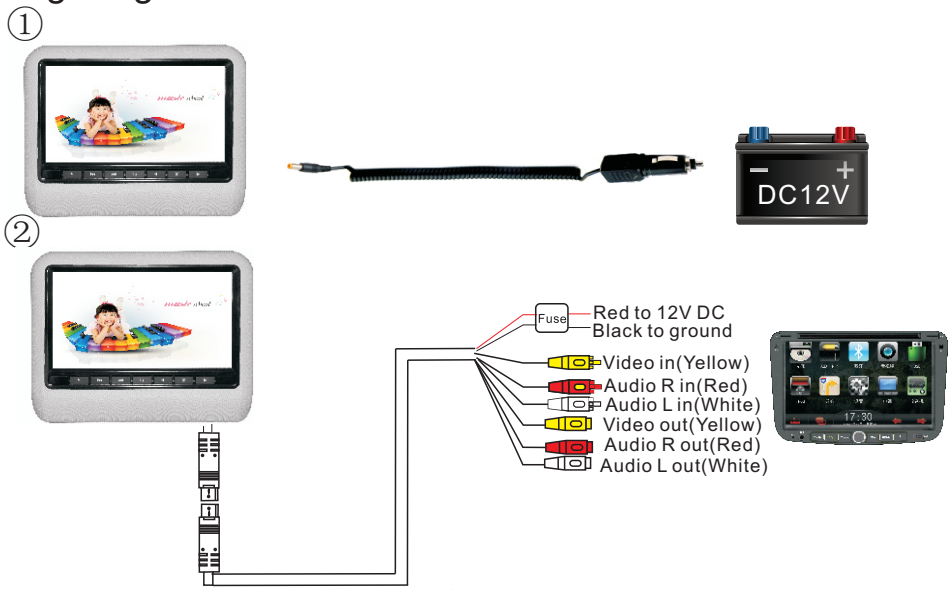

Appearance and functions

1)Power switch and video switch
2) Next
3) Last
4) Disc in/out
5) IR window
6) Volume−/analogue−
7) Menu/play/pause
8) Volume+/analogue+
9) Remote window
10) Disc in/out mouth
11) USB port
12) SD port
13) Earphone jack
14) Video 2 input
15) DC 12V Jack

GAMEPAD

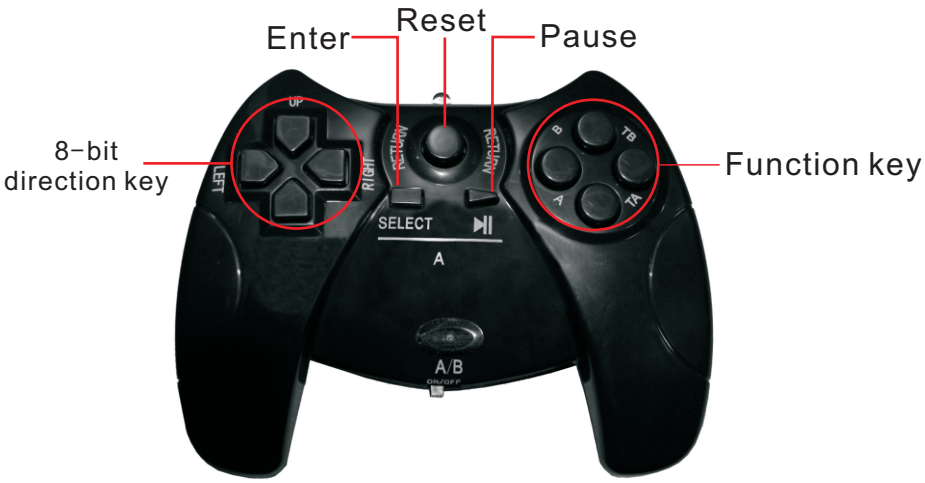

Remote control

Battery installation diagram for remote control

Attention:

1. do not directly touch infrared light
2. do not press remote control when disassembling the battery cover of remote control
3. take out battery when rarely using
4. normally, battery life is about one year. replace battery when the remote control is not sensitive.

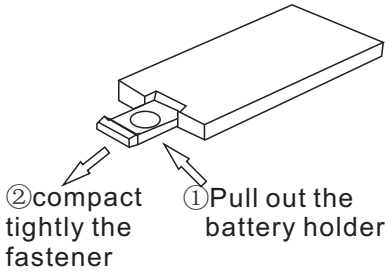

2. Volume setup

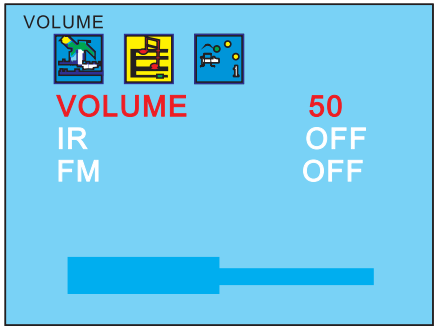

1.Volume adjust

2. IR Setup

3. FM Setup

3. Functional setup

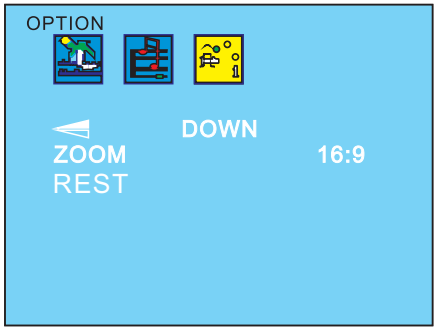

1. Rotation

2.image display mode

3.Reset

2.audio

Press ＜/＞ on panel or VOL+ VOL- on remote control to set it accordingly.

a: volume

Audio control, (you can choose infrared/speaker/radio/speaker, speaker/radio, infrared/speaker/radio, radio, infrared, infrared/speaker, infrared/radio)

3. Functions

Press TFT MENU on panel or ↑ ↓ on remote control and the screen displays below menu pictures, then press ＜/＞ on panel or ← → on remote control to set it accordingly

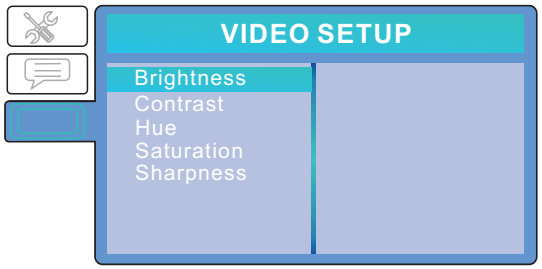

introduction of USB/SD function

1.Enter: press SD under DVD mode and switch to the mode you need in DVD,USB and SD mode.

2.Exit: press ■/↺ or SD under USB/SD mode and then switch to DVD mode.

Menu function setup

In AV1 or AV2 state Press 📖 on panel or TFT MENU on remote control to enter the main menu. Then press ⏮/⏭ on panel or ⬆ ⬇ ⬅ ➡ on remote control to setup and adjust

Main menu include below parts

Image
Volume
Function

Detailed setup as below diagram

1.image setup

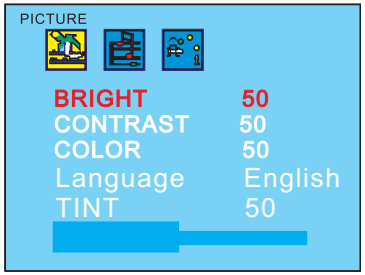

1. Brightness
2. Contrast
3. Color
4.Language
5.Tint

Installation

1、Take out the machine,remove the screws, Unplug support plastic parts and take off the U-shaped sheet iron on both sides of the brackett,then pull out the plastic ring.

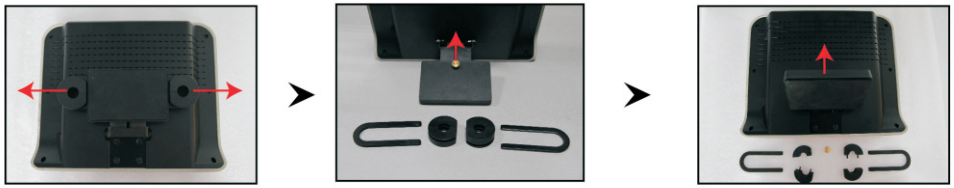

2、Rising the original headrest, then according to the diameter of the original car headrest iron pole to choose the right plastic ring and apart it and grip on theoriginal car headrest irons(the ring plane toward to the middle of the two iron),then insert the U-shaped iron plats to fixed the two plastic ring.

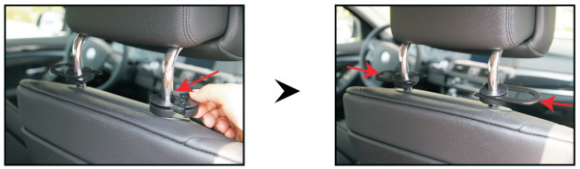

3、put the plastic bracket parts in between two iron plates,at the same time,push the U-shaped iron plates and insert them into plastic bracket, and adjust it to make sure it be in the middle of two iron poles

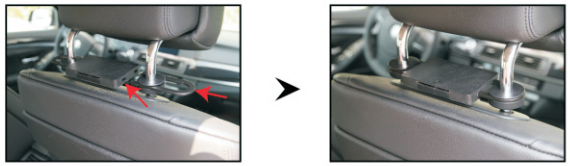

4、Hold up unit,insert the metal plate in black of the unit into plastic bracket parts, then adjust it to the right angle and fix it tightly,at last lower the orignal car hedrest to the appropriate position.

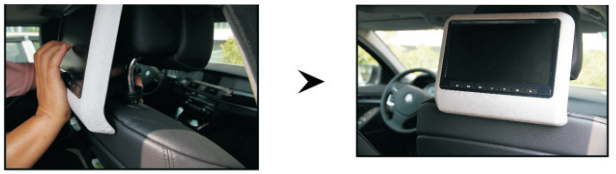

Operation of DVD system

Play DVD/DCD/CD

when put the disc into the DVD mouth,pls keep the label toward back，Auto-matically play

Press ■/⏏ on panel or ■/⏏ on remote control to stop.

Press ⏯ on panel or ⏯ on remote control to pause.

Play MP3

Insert the file storage media into the machine to autoplay

Press ■/⏏ on remote control to stop.

Press ⏯ on panel or ⏯ on remote control to pause.

Press ⏯ on panel or ⏯ on remote control when pausing to replay

Replay

1.Press AMS RPT to repeat one or more songs

2.press numeric key to directly play the specified song

System setup

Press button of setup on remote control to enter system and set menu.

Press ↑ ↓ ← → on remote control to choose modification item and press ENTER to enter,as below picture.

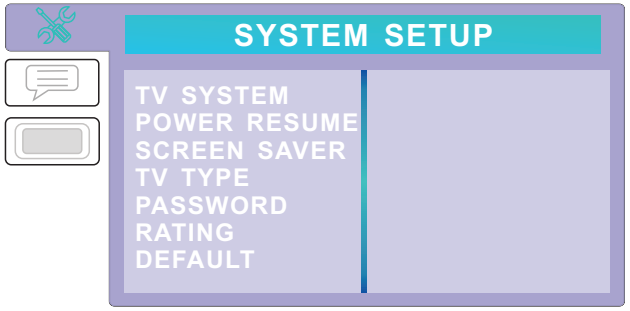

1.TV system: set DVD output image format and three formats of NTSC/PAL/AUTO can be chosen.

2.resume play: switch of resuming play after power off

3.screen saver: switch of screen protection icon

4.screen picture ratio: choose image output ratio as per request

5.password: set new password and the initial password of system is [0000]

6.level set: set parents lock as per different levels

Remark: Default rating password is [0000]

7.default setting: restore factory's initial settings

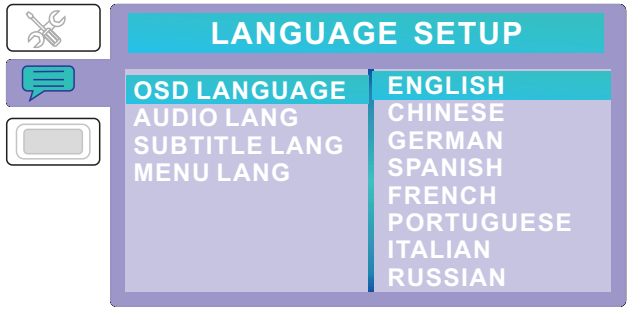

8.language showed on the screen: choose the language showed in the menu as per request

9. audio language: set disc output language

10. subtitle language: set disc subtitle language

11.menu language: set menu language of disc

Remark: the disc must support audio language, subtitle language and menu language.

12.Video setup:Set DVD,video screen display effect.